


AVOID contact between filter and the chemical alkyl dimethyl benzyl ammonium chloride (ADBAC)¹.


If external cleaning of the DSU-H is needed, use a low % bleach cleaner such as Clorox[®] Healthcare Bleach Germicidal, or Dispatch[®] Hospital Cleaner Disinfectant Towels with Bleach.

Dual Stage Ultrafilter (DSU-H) Shower Installation Guide


See DSU-H Instructions for Use

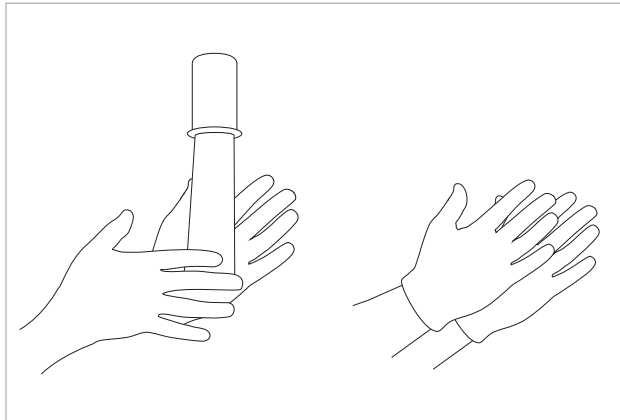


1. WASH hands before starting installation.
2. WEAR latex gloves before handling filter.
3. Hand sanitizers used in healthcare can effect performance of product material.¹

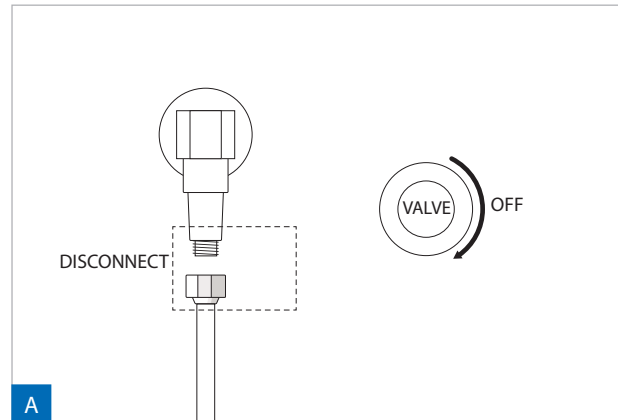


1. TURN OFF the shower valve.
2. DISCONNECT and REMOVE the existing shower head and hose from the water supply pipe.

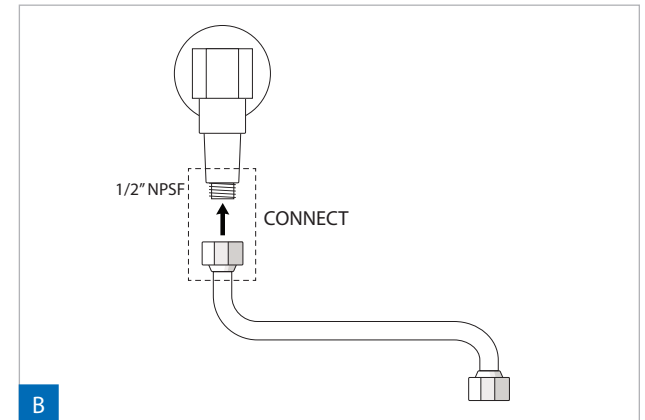


1. CONNECT a new flex line by the 1/2" NPSF fitting to the water supply pipe.

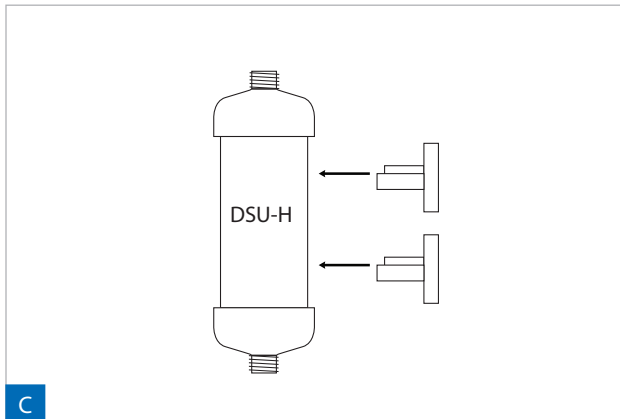

1. CLIP both c-clamps around the filter.

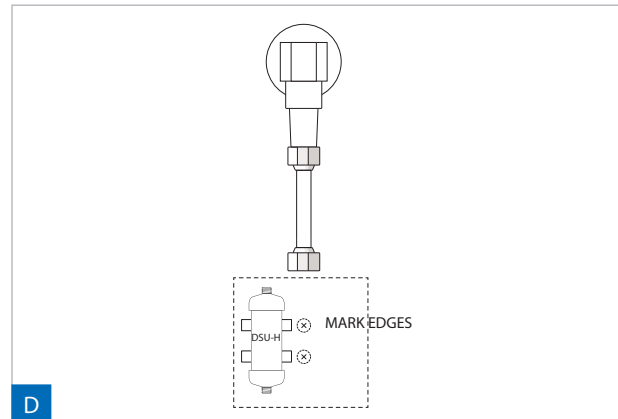


1. PLACE filter vertically against a surface near the water supply pipe in a position that the flex line is not stretched.
2. MARK the edges of the c-clamps at their location.

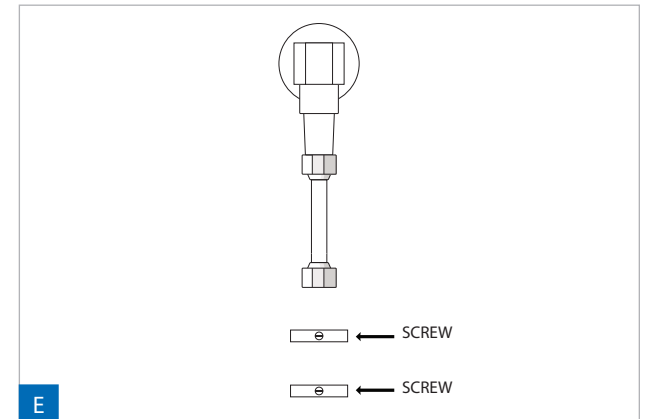


1. MOUNT the c-clamps with 2 screws (one each), lining up the edges of the c-clamps with the marks previously made.


¹ The chemical ADBAC can cause structural damage to filter.

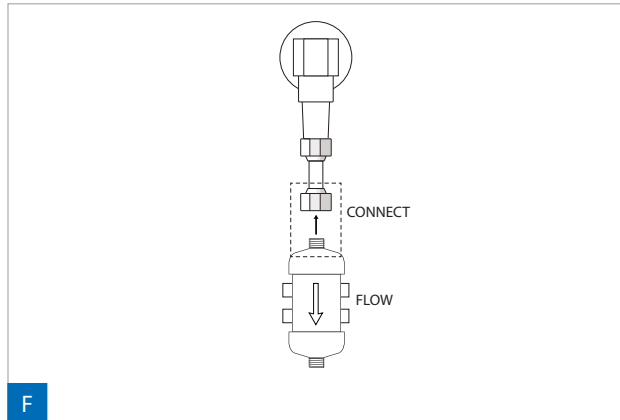


- 1.** CLIP the filter so the FLOW direction is towards the flow of water, pointing away from the water supply pipe.
- 2.** CONNECT the water supply pipe flex line to the inlet of the filter.

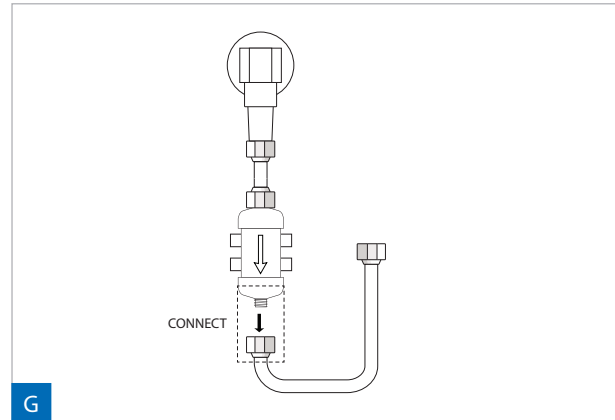

- 1.** CONNECT the shower hose to the outlet of the filter.
- 2.** Refer to either Option 1 or Option 2 for connection to shower head.

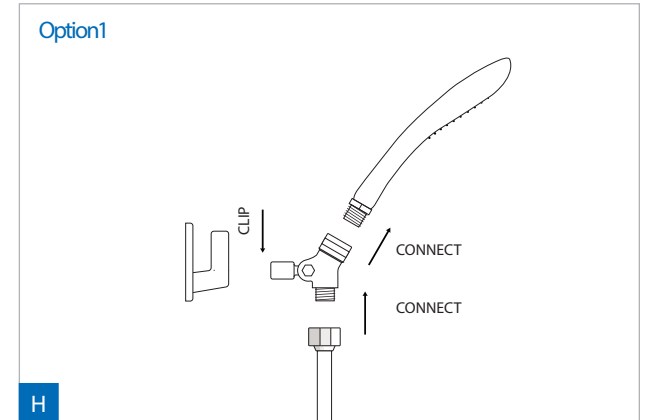

- 1.** CONNECT the female connector on the shower hose to the Swivel Connector.
- 2.** CONNECT the male connector on the swivel connector to the shower head.
- 3.** CLIP the attachment on the swivel connector onto the existing shower hook.
- 4.** TURN ON the water supply and allow water to run for a few minutes to purge all the air out of the filter.
- 5.** CHECK for leaks and tighten any fittings if necessary.

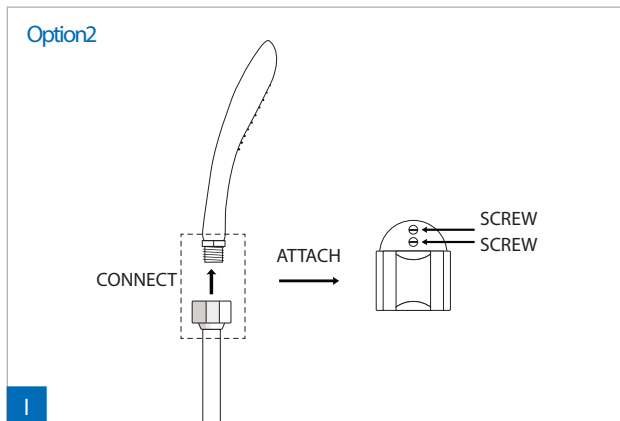

- 1.** CONNECT the other end of the shower hose to the hand shower head.
- 2.** MOUNT the shower holder by its screws at desired position for holding the hand shower head.
- 3.** TURN ON the water supply and allow water to run for a few minutes to purge all the air out of the filter.
- 4.** CHECK for leaks and tighten any fittings if necessary.