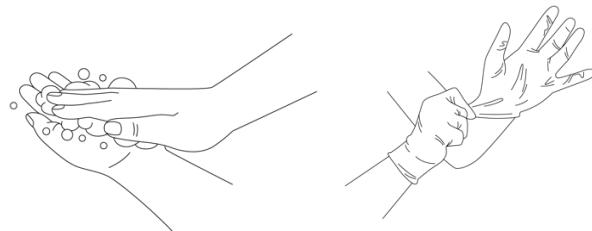
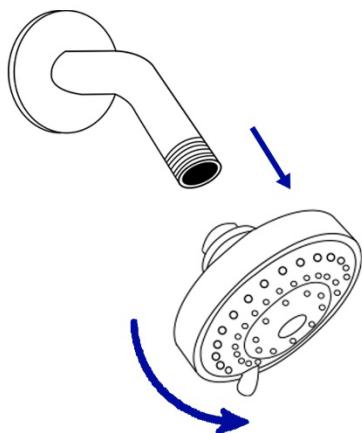


S100 In-Line (Thread) Installation With Fixed Shower Adapter Arm**1**

READ the entire installation guide and precautions before starting.

WASH hands.

WEAR gloves before handling filter (do not remove blister pack).

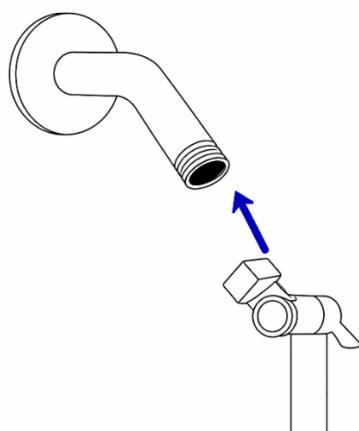
2

TURN OFF shower valve.

For new installations, REMOVE and DISCARD the existing showerhead from water supply pipe, and REMOVE any existing Teflon tape.

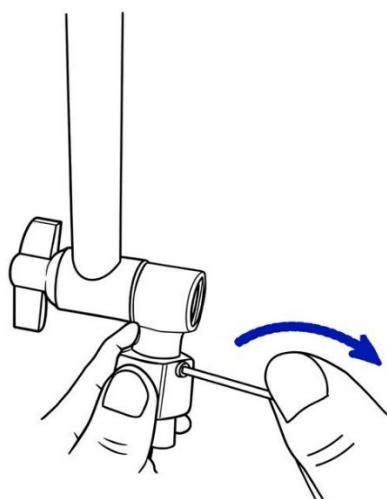
For filter replacements, LOOSEN set screws on the adapter arm filter inlet and outlet ports, REMOVE showerhead from filter outlet and PLACE on clean surface, REMOVE and DISCARD filter, and PROCEED to step 5.

CAUTION: FOR FILTER REPLACEMENTS, PLACE SHOWERHEAD ON CLEAN PAPER TOWEL OR OTHER CLEAN SURFACE. DO NOT PLACE IN SINK OR OTHER WETTED AREAS TO AVOID CONTAMINATION.

3

TIGHTEN shower adapter arm nut on water install pipe. DO NOT apply Teflon tape.

If threaded nuts are facing the inside of the adapter arm, LOOSEN wing nuts 1 full rotation, FLIP threaded nuts to outside, and TIGHTEN wing nuts prior to installation on water supply pipe.

4

TIGHTEN set screw on the water supply pipe side of the adapter arm.

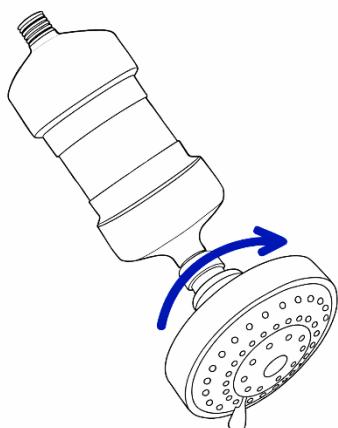
5

REMOVE used gloves and PUT ON new gloves.

DO NOT REMOVE the blister pack from the filter. TEAR OPEN the pack ends to expose threaded connectors as shown.

HOLD the filter by the blister and PROCEED to next step.

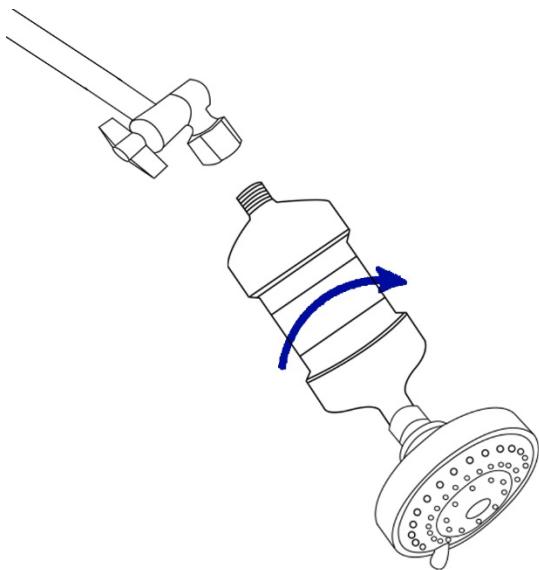
CAUTION: DO NOT TOUCH THE FILTER OUTLET TO MINIMIZE RISK OF CONTAMINATION.

6

INSTALL showerhead provided in this installation kit onto outlet of the filter by HOLDING the filter body and THREADING the showerhead onto the outlet. DO NOT apply Teflon tape onto filter threads.

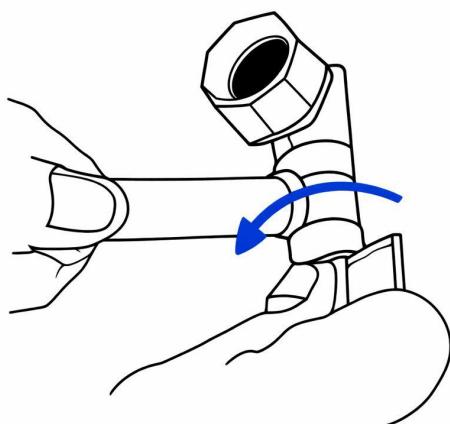
ENSURE showerhead DOES NOT come in contact with water supply pipe or any unfiltered water.

**CAUTION: AVOID
TOUCHING SHOWERHEAD
WITH WET OR USED
GLOVES TO MINIMIZE RISK
OF CONTAMINATION.**

7

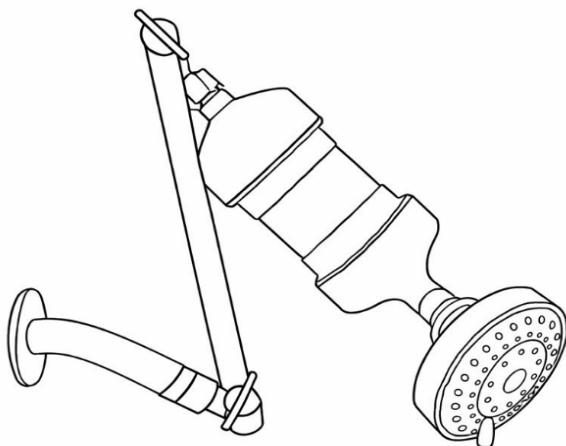
INSTALL filter with showerhead onto adapter arm. DO NOT apply Teflon tape onto filter threads.

TIGHTEN set screw.

8

LOOSEN wing nuts 1 full rotation and ADJUST arm to desired setup.

TIGHTEN wing nuts.

9

TURN ON shower, CHECK for any leaks and TIGHTEN connections as needed.

Note: Nephros recommends to periodically DISINFECT the showerhead for best performance and to reduce risk of contamination.

AVOID contact between filter and cleaning or sanitizing agents. Medical grade plastics are more susceptible to cracking due to exposure to organic solvents. Alkyl dimethyl benzyl ammonium chloride (ADBAC), glycols, alcohols, ketones, silicones, and acetones are some examples of the leading organic solvents found in cleaning and sanitizing agents. Use of cleaning/sanitizing agents on the filter housings is not required and should be avoided.

DO NOT remove blister pack from filter until indicated to protect from contamination.

Questions or issues? Let us help!

Call: (201) 343-5202, Ext. 3

Email: sales@nephros.com

50-3251 REV00